


Mounting instructions/Montagevejledning

To ensure the products fire proofing abilities, it is important that the mounting instructions are followed.

For at sikre produktets brandtekniske egenskaber, er det vigtigt at montagevejledningen følges.


A. Mounting/Montage

- 1 Compressed mineral wool – compressed 3 times as hard as normal.
Sammenpresset mineraluld - sammenpresset 3 gange hårdere end normalt.
- 2 Backing rod.
Fugebagstop.
- 3 5-20 mm mastic sealant.
5-20 mm fuge.
- 4 Fixing zone – must be fixed per 450 mm.
Fastgørelseszone – skal fastgøres per 450 mm.

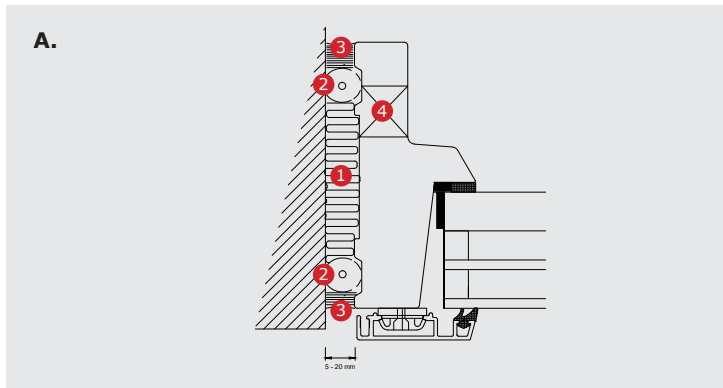

B. Coupling to fire door/Sammenstilling til branddør

- 1 ATTENTION: Through-going silicone sealant must be applied to the fire element before coupling the two products.
VIGTIGT: En gennemgående streng af siliconefugemasse placeres på brandelementets karm før sammenstilling.
- 2 Packer - must ensure gap of max 6 mm between the products.
Afstandsstykke som sikrer maksimalt 6 mm mellemrum.
- 3 Backing rod.
Fugebagstop.
- 4 Mastic joint – max 6 mm wide.
Fuge – maksimalt 6 mm bred.

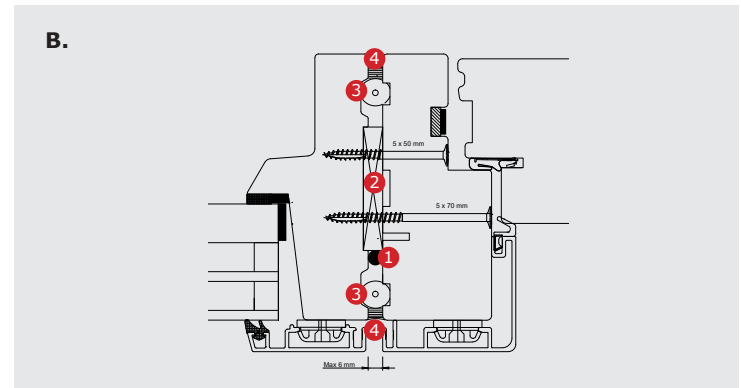



FIRE ELEMENT

Brandelement